FUNCTIONS

Setting	WiFi	ON/OFF
	Date/Time	YY/MM/DD, MM/DD/YY, DD/MM/YY
	Key Voice	ON/OFF
	Language	English, Chinese Simplified, Chinese Traditional,
		Japanese, Thailand
	License Plate	7-alphanumeric
	Screensavers	OFF/1-min/3-min
	Boot Sound	ON/OFF
	Format	All data will be deleted. Backup data to prevent
		unwanted files from being deleted
	Default setting	Restore setting to default setting
	Version	BP8.1A version
Video/ Image	Resolution	2K (Front) + 1080 (Rear)/ 1080 (Front) + 1080 (Rear)
	Loop Recording	1-min/3-min/5-min
	Parking Time Lapse	OFF/1s/2s/3s
	Record Audio	50Hz/60Hz
	Frequency	ON/OFF
	G-sensor	Off/Low/Medium/High
Playback	Delete, Recorded Video/	Front/ Rear Video & Photo
-	Photo	

ACCESSORIES











12V/24V DIGITAL VIDEO RECORDER **BP 8.1A** 2-CHANNEL





Enjoy it.

Operating and Installation Instructions

^{*}Subject to change

CAUTIONS


- Please insert the micro SD card in the right direction to avoid damage to the card or the device. If device shows error message, please format the micro SD card from device menu. Please reset device or change micro SD card if similar error continues. Note: All files will be deleted when formatting micro SD card or firmware update, please backup the important files prior to that. When reset function is selected, the device will return to default setting.
- Assign mounting location that will not obstruct driver in any circumstances. Or cause injuries to drivers and passengers in case of emergency brake or accident.
- Blaupunkt does not warrant the performance of device if used with other Micro SD card other than Blaupunkt Micro SD card
- New Micro SD card must be formatted for first use. Micro SD must be formatted once every 6-month.
- Ensure bracket is installed correctly & firmly on windscreen to avoid damage to device and for better recording angle.
- · Please do not use product under wet environment as device is not waterproofed/ water resistant.
- Please do not record or take picture facing
- To obtain clear image, please clean windscreen and device lens regularly. Avoid using device in dusty environment.
- Handle device with care and avoid direct impact on the device. Avoid using device in high electromagnetic environment.

 Please operate the product within the temperature of -20°C ~ 80°C. Continuous exposure to sunlight, especially when locked in cabin where temperature exceeds 80°C may result to device malfunction, colour change, housing and image distortion.

Disclaimer:

- Blaupunkt is not liable for any loss or damage caused or resulting from unauthorized disassembly or modification to the product.
- In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, special consequential damages, to property or life. improper storage, whatsoever arising out of or connected with the use or misuse of our
- USA & CANADA: Products not intended for sales in the United States and Canada. If purchased in the U.S. or Canada, this product is purchased as-is. No warranty, expressed or implied is provided in the U.S. and Canada.
- This device is NOT intended to be used for illegal purpose, surveillance and shall not be used in any form as evidence for claim purposes.
- Some countries prohibit drivers from mounting anything on the windshield, or restrict mounting to specific areas of the windshield. It is the owner's responsibility to mount the device in compliance with local laws.
- Error may occur depending on the surrounding environment and the voltage of the car.
- Blaupunkt is not liable/responsible for non-recorded event, missing files, etc.

STRUCTURE

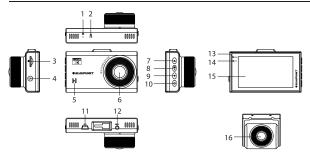

- Reset
- 2. Microphone
- 3. Micro SD card slot
- 4. OK Button
- 6. Front DVR Lens

- a) Menu Setting & Playback Mode
- Press to page up
- b) Recording Mode & Camera Mode
- 8. Menu/ Mode
- a) Menu Setting
- Press to select Menu option at standby mode 14. Recording indicator light
- · Press and hold for 2 second to select Playback mode
- a) Recording Mode
- Press to Mute & unmute

- 10. Power

- Speaker

- Press to switch front & rear camera view
- · Press and hold for 2 second for ON/OFF WiFi
 - - 13. Operation Indicator Light Flashes during operating

12. Rear DVR cable input

9. b) Camera Mode

a) Screensaver Mode

b) Turn On/Off

to display the screen

11. 12V-24V mini USB power supply

Press and hold for 2 seconds at standby

Press to hide the screen & press again

Press and hold for 2 second to turn on

· Press and hold for 2 second again to turn

mode to switch between Video & Photo

- · Blink during recording
- 15. 3.0" LCD screen
- 16. Rear DVR Lens

FEATURES FUNCTIONS - DVR

- Resolution : Front 4MP 2K 2560 x 1440 (25fps) Rear 2MP FHD 1920x1080 (15fps)
- Wide viewing angle: Front 140°, Rear 110°
- Screen display : Front, Rear, PIP (picture in
- 3.0" LCD screen display
- Super capacitor technology
- Low car battery voltage cut off
- · Built-in G-sensor Wireless control app available at App Store
- & Play Store
- Built-in microphone & speaker Language: English, Chinese Simplified,
- Chinese Traditional, Japanese & Thailand Power supply: DC 12V ~ 24V
- Temperature: -20°C ~ 60°C (Operating), -30°C ~ 80°F (Storage)
- Support up to 64GB Class 10 microSD
- Dimension (WxHxD): Front 85x48x35mm.
- Rear 45x47x38mm
- Weight: Front 80g, Rear 37g (without cable) Includes: Front DVR & rear DVR, bracket, hardwire & manual

Pair DVR with Android Smartphone

The distance range between the DVR and smartphone is approximately 10 meters (33ft) in an open field environment.

Wireless Connection (Wi-Fi)

Enable Wi-Fi & Location on Smartphone before beginning (Refer to the instruction manual of the smartphone on how to operate Wi-Fi & Location)

- Download "Blaupunkt DVR Dashcam" app from App Store (iOS) or Play Store (Android).
- At standby mode, press "▲" and hold for 2 second to turn on Wi-Fi. Enter "Menu" mode and search for the "WIFI ID", the WIFI ID & Password will be reveal.



- · Search for the WIFI ID of BP 8.1A on your smartphone and key in the password shown on the DVR BP8.1A.
- · Press on the centered Blue button to enter into the control view.



FUNCTIONS - DVR

 App will began recording automatically when Blaupunkt DVR Dashcam is connected.

Repeat Wireless Connection steps whenever smartphone is disconnected

Switch between Front / Rear View in App

 Press " ô" to switch between front & rear camera view.

Download Video or Photo

 Go to app recording screen to select Video or Photo gallery.







 Press and hold preferred video/photo to select then press "L" to download file.



Car License Plate Number

- Press "圈/M" (Menu/Mode) to enter the setting phase. Search for "License Plate" and select with "OK" (OK Button).
- Fill in the preferred numeric and alphabetic by pressing "▲"or "▼" (Up/Down button) and select with "OK" (OK button). Fill in the desired license plate number by repeating the steps.
- Press "Image / M" (Menu/Mode) when complete to exit the setting.

Emergency Recording

 The recording sign at the top left corner of the display will turn from red dot into yellow yellow. A yellow recording progress bar will appear at the bottom of the display.

a) Normal Recording



b) Emergency Recording



Format SD Card

· Format the SD Card before use for the first time, Press "III/M" (Menu/Mode), search for "Format" and select with "OK" (OK button) to confirm on the format. Once formating is completed, the BP8.1A is ready to be in use.

Super Capacitor Technology

 This technology ensure video files are saved even if sudden power cut-off.

Parking Timelapse Mode

 Press "圓/M" (Menu/Mode), search for "Parking time lapse" and select with "OK" (OK button), Next, select the preferred time lapse duration (1s / 2s / 3s). Press "圓/M" (Menu/Mode) to exit the setting menu.



Designed and engineered by Blaupunkt Competence Centre

1 301 20 017 31 01